

W W W . H U D - S O N . C O M

HUD-SON



FOREST EQUIPMENT

WWW.HUD-SON.COM • 800-765-SAWS

1.5" or 2.5" Stake Sharpener & Tenon Maker Owner's Manual



C O N G R A T U L A T I O N S !

You have wisely selected the
HUD-SON Hub & Stake Sharpener
that is Capturing the Market
With Unmatched Quality & Value.

Dan Hudon Sales, Inc.
8187 State Rte. 12 • PO Box 345 • Barneveld, NY 13304
315-896-2217 • 800-765-7297 • Fax: 315-896-2815
email: info@hud-son.com • Website: www.hud-son.com

8201 STATE ROUTE 12 • PO BOX 345 • BARNEVELD NEW YORK 13304

CAUTION! KEEP HANDS AND FINGERS AWAY FROM HUB BLADES!

Electric sharpener should be kept in a dry work area and away from rain.

Gas Sharpener should not be used indoors.

Operating this unit indoors may result in carbon

dioxide poisoning. Ear and eye protection should be used at all times.

Safety guards should not be removed from the unit for any reason.

For optimal efficiency and safety, please keep work area clear of debris.

CAUTION - Be EXTRA careful around these areas, unsafe practices may cause personnel injury or damage.

DANGER - Be careful around any rotating parts, they may cause personnel injury or damage.

DANGER - Be sure to be very cautious and alert, these areas may cause personnel injury or damage.

CAUTION - Operating equipment without guards may cause personnel injury or damage.

BLADE LUBE TANK - be sure to use the correct lubrication, if incorrect lube is used it may cause personnel injury or damage.

NOTICE - Please remember to send in warranty card and information.

CAUTION - All debris needs to be removed from machine before transporting, failure to so may cause personnel injury or damage.

CAUTION FIRE HAZARD - Keep all sawdust away from motor.



CAUTION - BEFORE, DURING AND AFTER OPERATION

Check the engine compartment for sawdust and wood trash build up in and around the engine compartment and the exhaust area to prevent any possible fires from starting due to excessive build up. Always clean the sawdust out from under the machine after shut down and be sure there is no sawdust build up near or around the muffler area.

GETTING STARTED

Insert each of the four legs into the brackets and tighten down with the T-Handle on each bracket. Legs should be positioned so that they spread further apart as they near the floor. If setting the unit up permanently, it is possible to use the pre-drilled hole in the foot of the unit to secure the sharpener for even more stability. When you initially set up your

sharpener for use you must be sure the rolling table is level. This prevents the unit from teetering or vibrating when in use. Decide which side of the stake you would like to sharpen and line it up so that the center of the stake will roll into the hub opening. **DO NOT PUT HANDS OR FINGERS INTO THE HUB OPENING.**



STAKE SHARPENER WARRANTY

All products manufactured by Hud-Son are warranted free of Manufacturer's defects for a period of twelve (12) months from the point of shipment.

Outsourced components will be warranted by the respective manufacturers for a period equal to the warranty in place at time of shipping, as indicated below.

Frame, Bed & Legs	One (1) Year	Contact Hud-Son Forest Equipment Check Yellow Pages for nearest Briggs & Stratton Servicing Dealer
Gasoline Engine	Two (2) Years	
Electric Motors	One (1) Year	Call Hud-Son Forest Equipment Read Manual
Blades	NO WARRANTY	

Warranty claims will be registered with the Manufacturer or Distributor and defective parts will returned to the Manufacturer at the owner's expense. The Manufacturer will assume cost of shipping (within the continental United States) one way in regards to any warranty claim.

Any such warranty repairs that are done in the field will be handled as follows:

Customer will call company and acknowledge problem.

If the problem can be solved in the field, new parts will be shipped and invoiced, credit will be given upon return of damaged parts.

Parts to be replaced must be returned at owner's expense within thirty (30) days or owner will be responsible for payment of replacement parts.

If problem is deemed too severe to be fixed in the field by customer, the customer must bring the unit, at their own expense, to the nearest Hud-Son Dealer for repair. If Dealer is not qualified for the repair job, the equipment must be returned to manufacturing company at the customer's expense.

If problem is deemed not to be a warranty problem, an invoice will follow for the parts that were replaced, as well as an invoice for any time spent on the unit by Hud-Son Forest Equipment Staff or Dealer Staff.

Any modification to the unit that is accomplished by personnel other than HUD-SON Forest Equipment direct employees voids this warranty.

DISPUTES

All disputes, claims and causes of action arising out of the delivery, use, or warranty claims for personal injury and or property damage must:

1. Claimant must provide a written notice of the claim or dispute to the company (at the address below) at least 30 days after the claim arose prior to commencement of any action;
2. Company has 60 days to make a decision on the claim and will provide a written response to claimant;
3. No action may be commenced until after the company has provided its decision on the claim;
4. All claims against the company for any cause related to delivery,

design defects, repairs, use of the equipment or warranty shall be filed in Supreme Court, Oneida County, State of New York. The parties may file for Arbitration in Oneida County New York after consent by both parties.

5. Construction and interpretation of this agreement and any and all claims shall be subject to the Laws of the State of New York.

6: The address for submission of claims is:
 Hud-Son Forest Equipment
 PO Box 345
 8201 State Route 12
 Barneveld, NY 13304

7. Notices under this agreement must be in writing and sent by certified or registered mail;

The table is entirely adjustable to accommodate any size stake up to 1.5" on the Small Sharpener or 2.5" on the large sharpener. The table may be adjusted horizontally with the two threaded rods located on the bed. The stake should fit snugly, against the table top and side guides. Adjust side guides left to right again so that the point is located in the center of your stake.

Secure the stake using the available clamp. Tighten the stake down, while table is rolled farthest from the hub of the machine allowing enough of your stake sticking out so that as it is fed, the stake may be reached.

Cutting blades are also adjustable and they are able to be resharpened. Sharpen Blades while wearing protective hand wear.

Please call
Hud-Son Forest Equipment
with any other questions on use or
operation of this unit.
Thanks for your purchase.